



Installation manual

Tumble dryer

T5290

Type N2...



Thinking of you
Electrolux

Contents

Contents

1 Safety Precautions	5
2 Technical data	7
2.1 Drawing	7
2.2 Technical data.....	8
2.3 Connections.....	8
3 Setup.....	9
3.1 Unpacking.....	9
3.2 Siting.....	10
3.3 Mechanical installation	10
4 Marine installation	11
5 Reversing the door.....	12
6 Evacuation system	15
6.1 Air principle.....	15
6.2 Fresh air	16
6.3 Exhaust duct.....	17
6.4 Shared exhaust duct.....	18
6.5 Exhaust dimensioning	19
7 Steam connection	20
7.1 Connecting the steam.....	20
7.2 Steam calorifier.....	21
8 Gas connection	23
8.1 Fasten the label	23
8.2 General.....	23
8.3 Gas installation	24
8.4 Table of pressure and adjustment	25
8.5 Test run.....	26
8.6 Converting instructions	27
8.7 Data label	29
9 Electrical connection	30
9.1 Electrical installation	30
9.2 Single-phase connection	31
9.3 Three-phase connection.....	32
9.4 Electrical connections.....	33
9.5 Functions for I/O-cards	34
9.5.1 Central payment (22J)	34
9.5.2 Central payment (22J)	35
9.5.3 External coin meter/Central payment (22K).....	36
9.5.4 Price reduction (22K)	37
9.5 Option	38
9.5.1 External connection 100 mA.....	38
10 Function check	39

The manufacturer reserves the right to make changes to design and component specifications.

1 Safety Precautions



The machine is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the machine.

The machine is not to be used if industrial chemicals have been used for cleaning.

Do not dry unwashed items in the machine.

Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the machine.

Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the machine.

Fabric softeners or similar products should be used as specified by the fabric softener instructions.

The final part of a drying cycle occurs without heat (cool down cycle) to ensure that the items are left at a temperature that ensures that the items will not be damaged.

Remove all objects from pockets such as lighters and matches.

WARNING. Never stop the machine before the end of the drying cycle unless all items are quickly removed and spread out so that the heat is dissipated.

Adequate ventilation has to be provided to avoid the back flow of gases into the room for appliances burning other fuels, including open fires.

Exhaust air must not be discharged into a flue which is used for exhausting fumes from appliances burning gas or other fuels.

The machine must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the machine.

If the machine has a lint trap this has to be cleaned frequently.

The lint must not be accumulated around the machine.

Gas heated tumble dryer:

The machine is not to be installed in rooms containing cleaning machines with perchloroethylene, TRICHLOROETHYLENE or CHLOROFLUOROCONTAINING HYDROCARBONS as cleaning agents.

If you can smell gas:

- Do not switch on any equipment
- Do not use electrical switches
- Do not use telephones in the building
- Evacuate the room, building or area
- Contact the person responsible for the machine




All external equipment which is connected to the machine must be CE/EMC-approved and connected using an approved shielded cable.



In order to prevent damage to the electronics (and other parts) that may occur as the result of condensation, the machine should be placed in room temperature for 24 hours before being used for the first time.

2 Technical data

2.1 Drawing

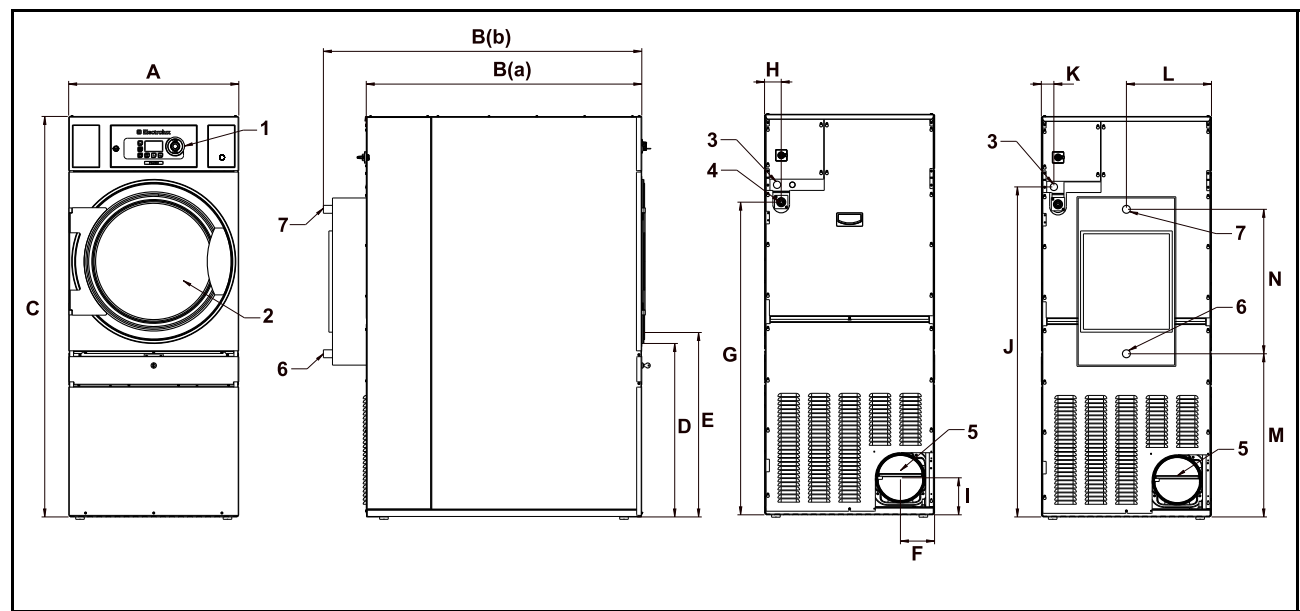

1	Operating panel
2	Door opening, \varnothing 580 mm
3	Electrical connection
4	Gas connection
5	Exhaust connection
6	Steam: in
7	Steam: out

	A	B(a)	B(b)	C	D	E	F	G
mm	710	1155	1335	1675	725	780	140	1310

	H	I	J	K	L	M	N
mm	70	155	1380	55	355	685	605

2.2 Technical data

Weight, net	kg	220
Drum volume	litres	290
Drum diameter	mm	680
Drum depth	mm	770
Drum speed	rpm	50
G-factor, max.		0.94
Capacity, filling factor 1:18 (Max. load)	kg	16.1
Capacity, filling factor 1:22 (Recommended. load)	kg	13.2
Heating: Electricity	kW	18
	kW	13.5
Heating: Gas	kW	21
Heating: Steam	kW	25
Air consumption, Electric heating, 13.5 kW	m ³ /h	380
Air consumption, Electric heating, 18.0 kW	m ³ /h	450
Air consumption, Gas heating	m ³ /h	550
Air consumption, Steam heating	m ³ /h	640
Airborne sound level	dB(A)	70
Pressure drop, Electric heating, 13.5 kW	Max. Pa	400
Pressure drop, Electric heating, 18.0 kW	Max. Pa	350
Pressure drop, Gas heating	Max. Pa	350
Pressure drop, Steam heating	Max. Pa	350

2.3 Connections

Air outlet	ø mm	200
Steam outlet	1"	ISO 7/1–Rp1/2
Condensate outlet	-	ISO 7/1–Rp1/2
Gas connection	1/2"	ISO 7/1–R1/2

3 Setup

3.1 Unpacking

Note!


Two persons are recommended for the unpacking.

The machine is delivered complete with supporting feet.

The machine is delivered bolted onto the transport pallet and packed in a crate or box.

Remove packing from the machine.

Remove the bolts between the machine and pallet. There are two bolts in the front of the machine and two in the back of the machine. Remove the lower front panel and remove the two bolts in the front of the machine. Remove the lower back panel and remove the two bolts in the back of the machine. Remount the panels when done.

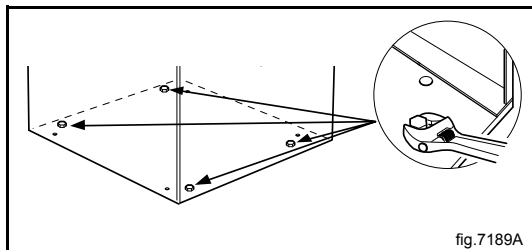

Remove the machine from the pallet.

Note!


When removing the machine, handle it with care. The drum has no transport securities.

Place the machine on its final position.

3.2 Siting


The machine should be positioned so that there is plenty of room for working, both for the user and service personnel.

The figure shows minimum distance to a wall and/or other machines.

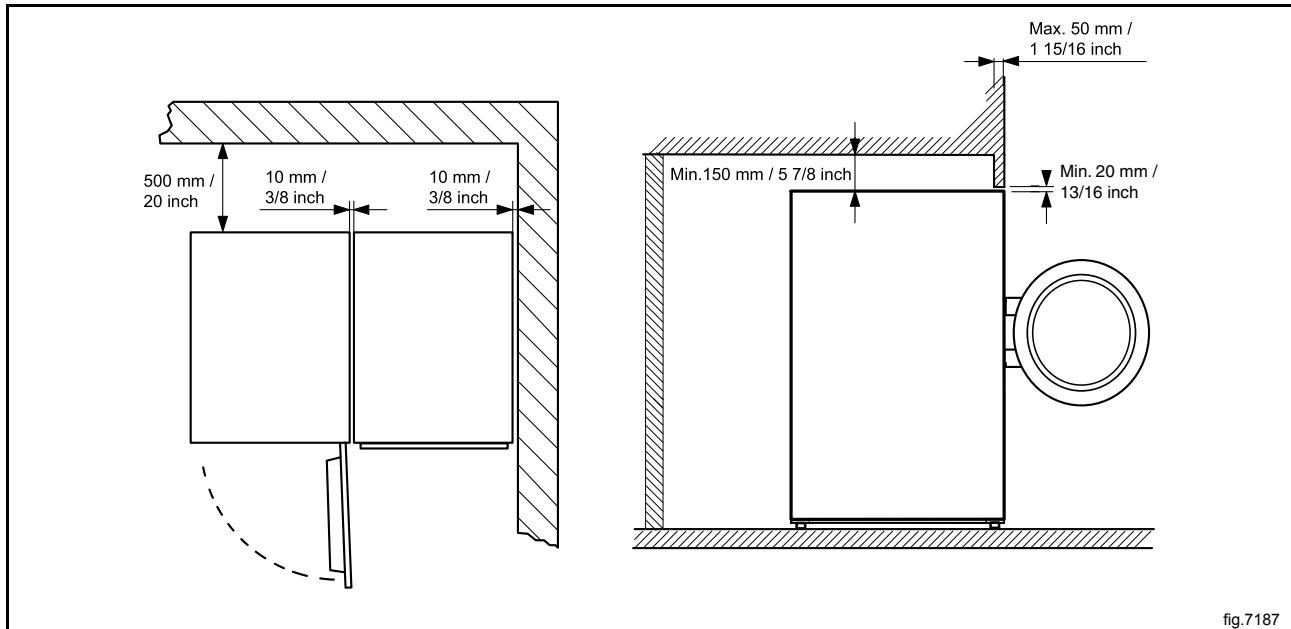

3.3 Mechanical installation

Level the machine with the feet of the machine. The maximum height adjustment of the feet is 15 mm.

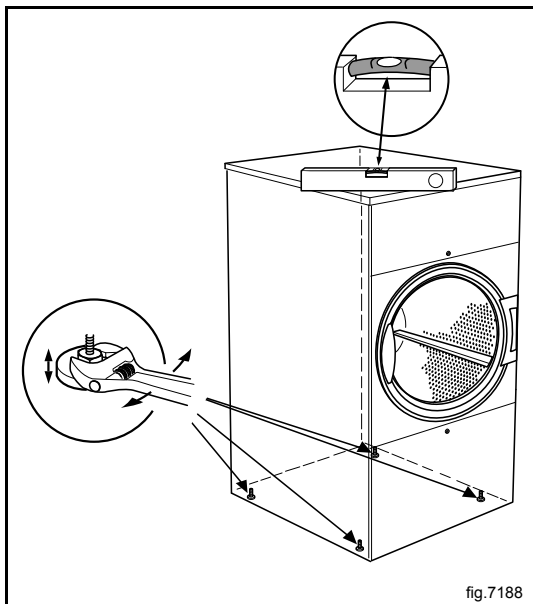

4 Marine installation


To ensure steadiness of the machine it is important to fasten the machine to the foundation.

Fasten the four fittings (supplied with the marine machine model) to the foundation using four x M10 set screws. If the four fittings is not supplied, order kit Nr. 487193544.

Fasten the machine to the fittings.

Note!


Marine installation is not applicable for gas heated machines.

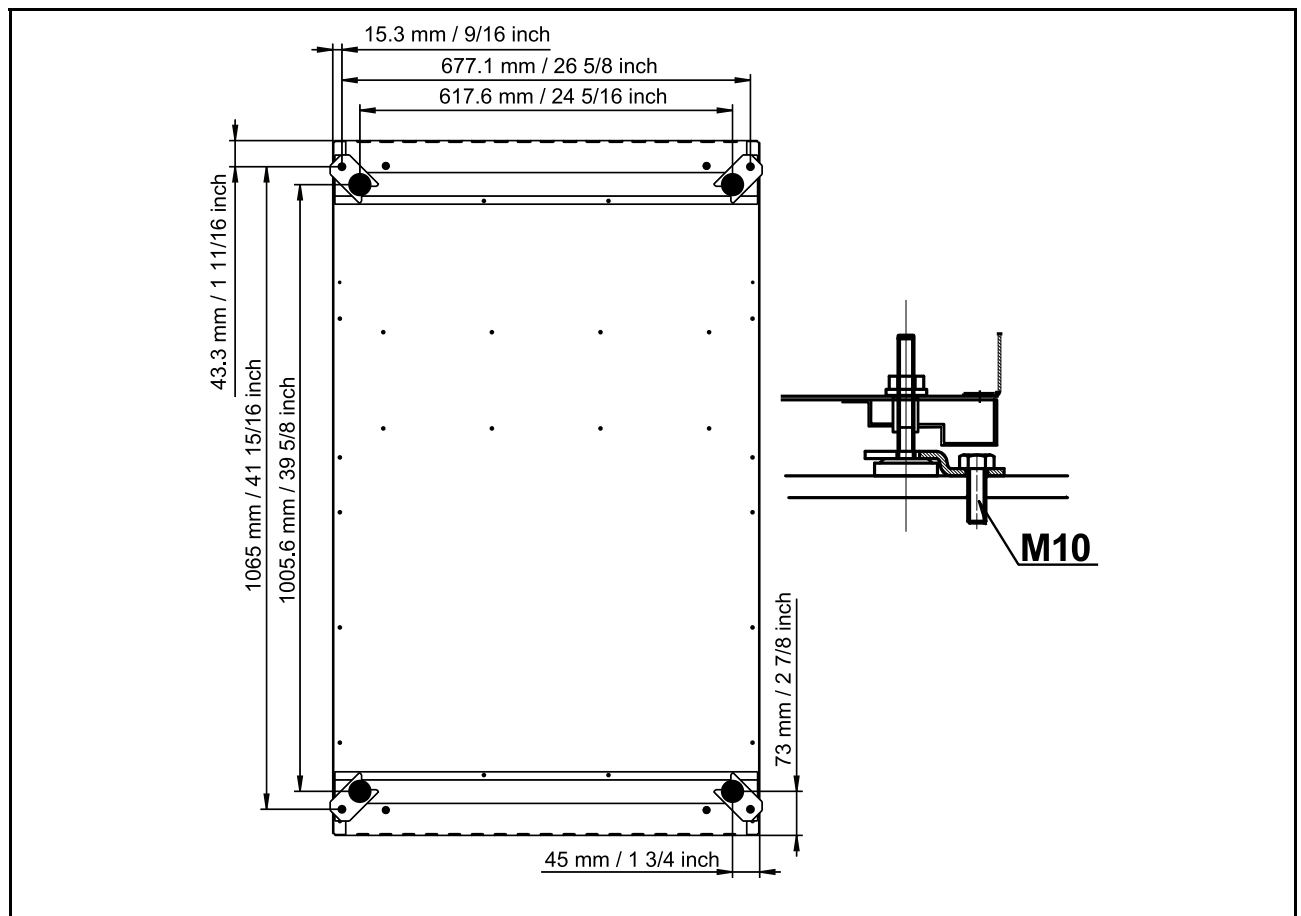


5 Reversing the door

Disconnect the power to the machine.

Demount the hinges and remove the door. Remove the upper hinge first.

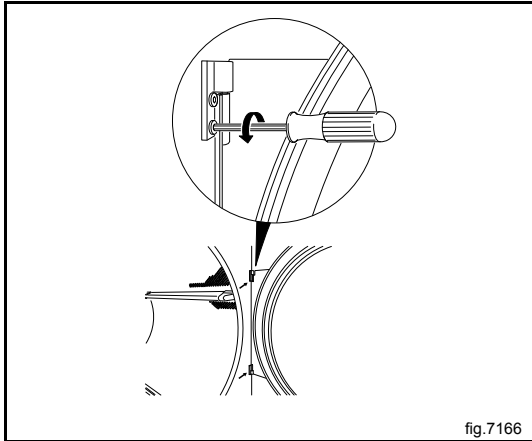


Remove the screws on the front panel and carefully loosen the panel. Disconnect the door switch cable and remove the panel.

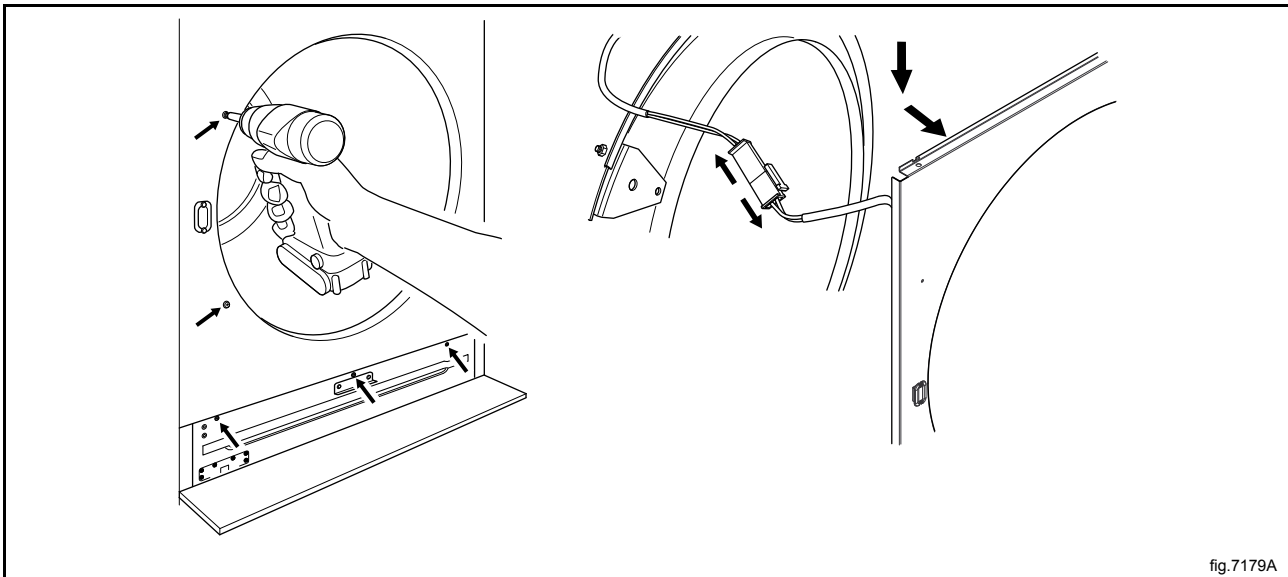


Move the door switch cable to the opposite site.

Note!

The plastic plug **MUST** be placed in the hole where the door switch cable was before.

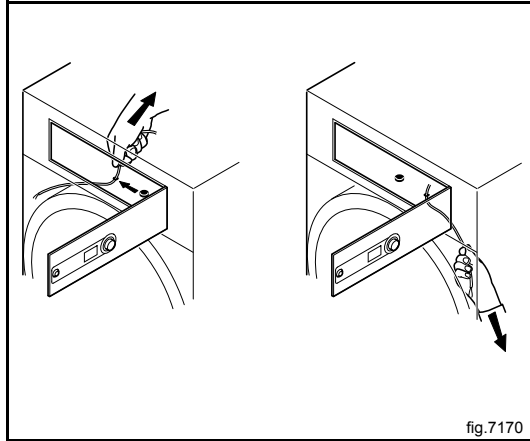


Loosen the nuts and move the two brackets to the opposite side.

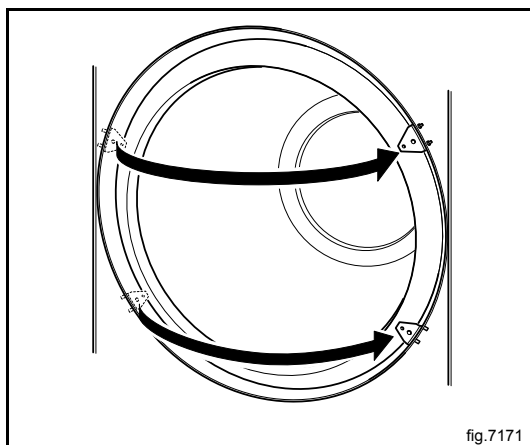


Reversing the door

Move the door switch on the front panel.

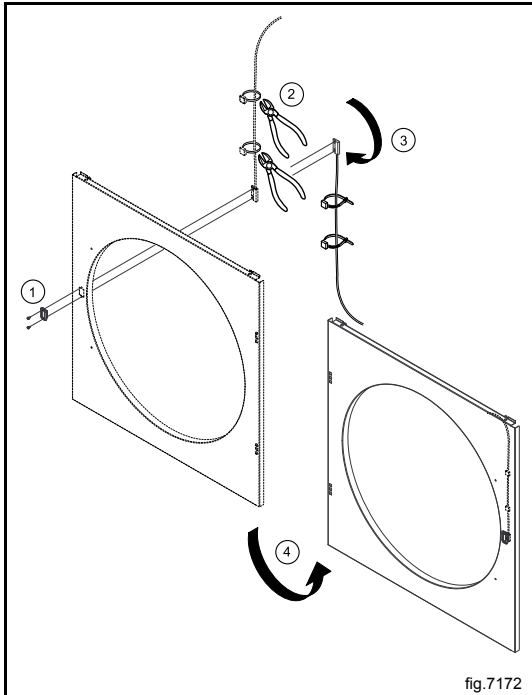

Move the four metal clips from the right side to the left side.

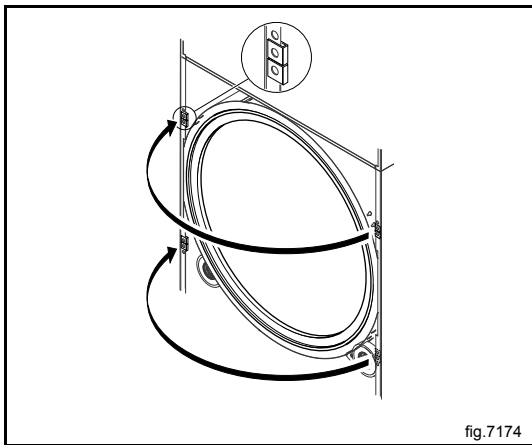

Connect the door switch cable and remount the front panel.

Fasten the hinges and mount the door on the opposite side than before.

Connect the power to the machine.

Test run the machine.

6 Evacuation system


6.1 Air principle

The fan creates low pressure in the machine, drawing air into the drum via the heating unit.

The heated air passes through the garments and the drum holes.


The air then flows outh through a lint filter positioned below the drum. Then the air is evacuated through the fan and exhaust system.

Dimension for air evacuation (A) is 200 mm.

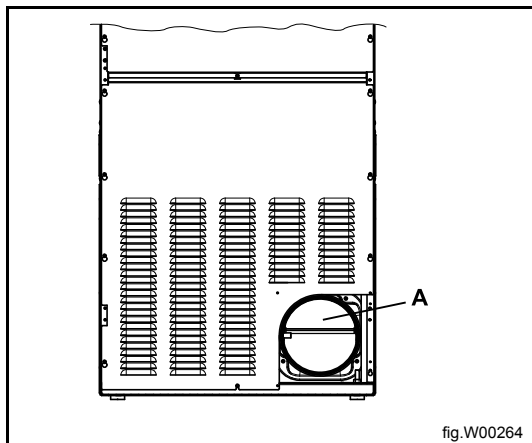

Note!

It is very important that the machine gets enough fresh air in order to get the best drying result.

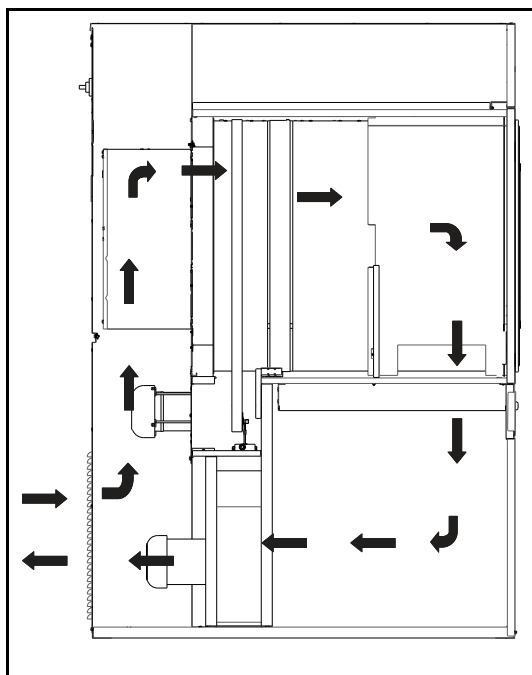


6.2 Fresh air

For maximum efficiency and the shortest possible drying time, it is important to ensure that fresh air is able to enter the room from the outside in the same volume as that blown out of the room

To avoid draught in the room it is important to place the air inlet behind the machine.

The area of the air inlet opening must be five times the size of the exhaust pipe area. The area of the inlet opening is the area through which the air can flow without resistance from the grating/slatted cover.

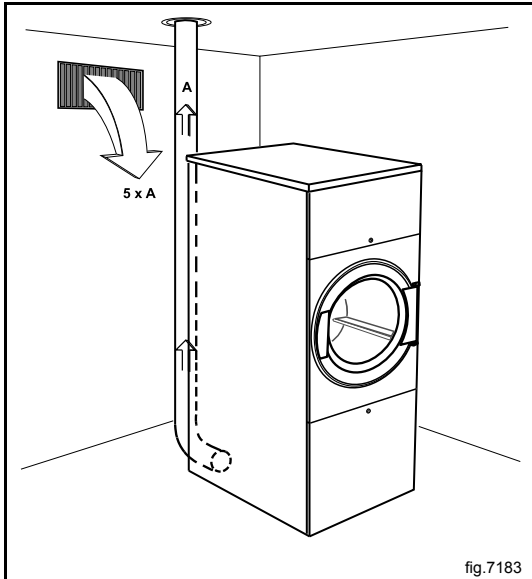


Note!


Gratings/slatted covers often block half of the total fresh air vent area. Remember to take this into account.

6.3 Exhaust duct


- Only rigid or flexible metal duct should be used for exhausting.
- Plastic ducting is not to be used.
- Recommended material for exhaust is galvanised steel.
- The duct is not to be assembled with screws or other fastening means that extend into the duct and catch lint.
- The exhaust air should not be vented into a wall, a ceiling, or a concealed space of building.
- The exhaust duct must lead clear of the building as condensation may cause frost damage to the building.
- The exhaust duct must lead to the outdoors.
- The exhaust duct must be placed in such a way that it is protected on the outside.
- The exhaust duct must be smooth on the inside (low air resistance).
- The exhaust duct must have gentle bends.
- The exhaust duct must not be a shared duct between machines and appliances using gas or other fuels as their energy source.

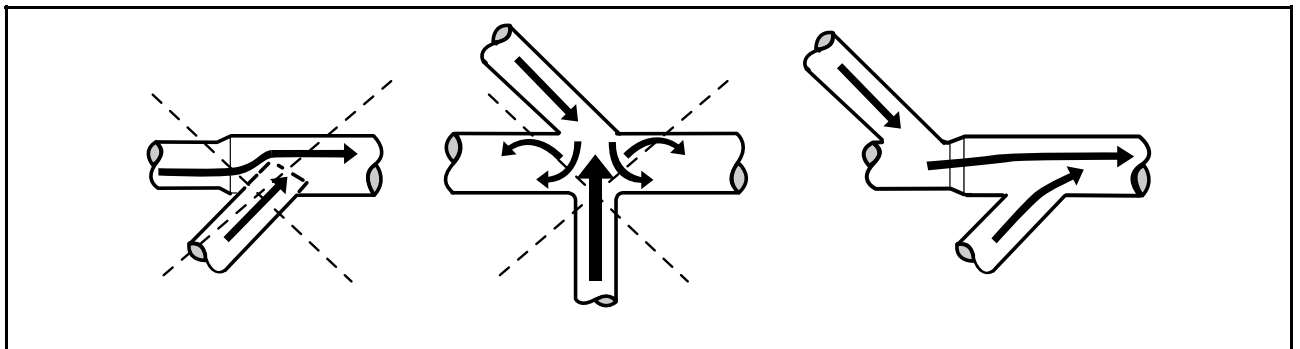


6.4 Shared exhaust duct




It is recommended that each machine is connected to a separate exhaust duct.




When several machines shall use the same exhaust duct the exhaust duct must increase after each machine.

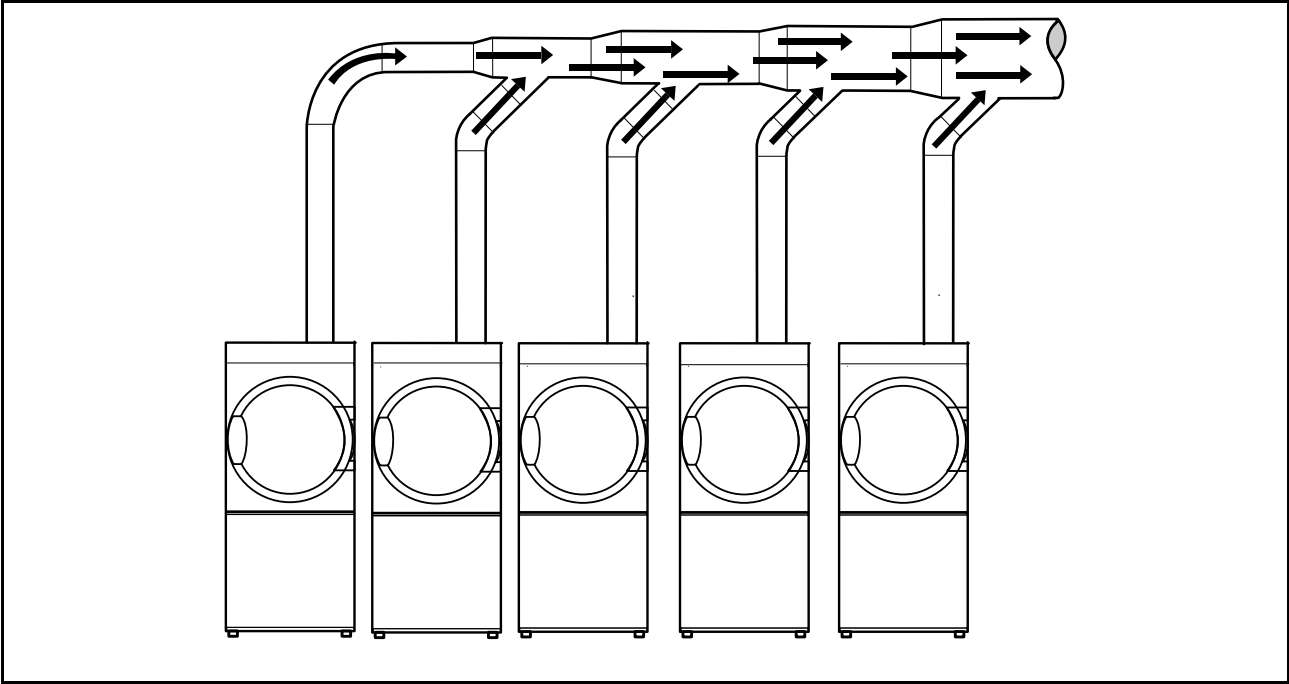

Number of machines	1	2	3	4	5	6	7	8	9	10
Exhaust duct ø mm	200	280	315	355	400	450	475	500	535	560
Minimum area of fresh-air intake m²	0.15	0.30	0.45	0.60	0.75	0.90	1.05	1.20	1.35	1.50



The exhaust duct diameter must not be reduced.



6.5 Exhaust dimensioning

It is important that the machine has correct air volume compared to each machines power.

If the air volume is smaller or bigger this will result in a longer drying period.

The machine is designed to work with 25 m outlet pipe and two 90 degree bends. Each bend is equal to 2.5 m. If more than two bends is needed the length should maximum be shortened with 2.5 m per bend.

If the outlet pipe is longer or the ventilation is not properly designed we recommend to clean the outlet pipes periodically.

The exhaust pipes shall be short in order for the machine to work in the best way.

All cover plates must be mounted in order for the machine to work in the best way.


7 Steam connection

7.1 Connecting the steam

Note!

The steam pipe must be cut off and must not be under pressure.

- The branch pipe's must be located at the top of the main steam pipe to prevent condensation in the steam.
- The branch pipe must have a descending gradient and must end at a height above the inlet connecting branch (5). For measurements M, N and O, please refer to the dimension drawing.
- Mount a plug valve (a) and a dirt collector (c) in the brach pipe.

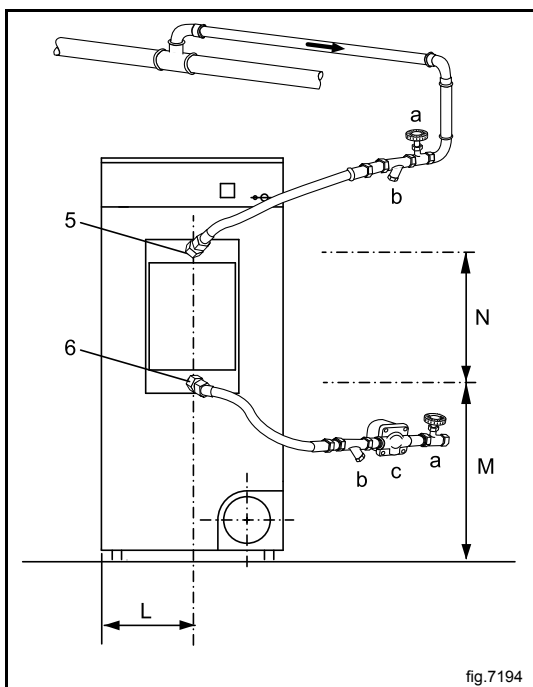

Condensate return

It is important that the brach pipe for condensed water on return to the main condensate pipe has a descending gradient and is lower than the outlet connecting branch (6).

- Mount a dirt collector (b) in the return pipe.
- Mount a mechanical water discharger behind the dirt collector (c).
- Mount a plug valve (a).
- Mount pressure hoses between the branch pipes and the machine. Note that hoses are not supplied.

Pipe insulation

All pipes must be insulated in order to reduce risk of burning. Insulation also reduces loss of heat to the surroundings.


7.2 Steam calorifier

Mount the steam calorifier

Unpack the steam calorifier.

Demount the back plate on the machine.

Demount the supporting rail on the machine (A). Note which way the supporting rail turns as it has to be remounted the same way.

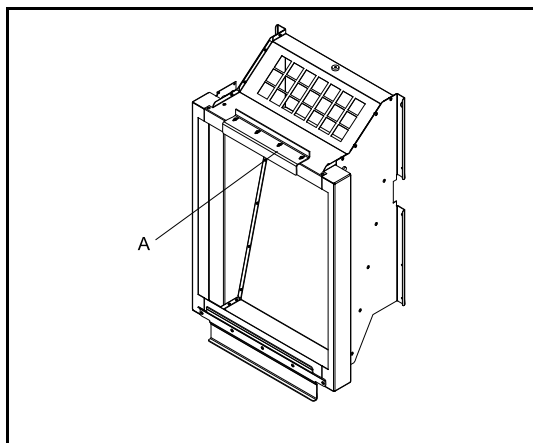

Hang the calorifier on the bottom supporting rail on the machine.

Hold the calorifier towards the machine and remount the supporting rail. Make sure that it grasps the calorifier.

Fasten the calorifier into the supporting rail with the screws.


Note!

There must be no space between the machine and the calorifier.

Mount the back plate.

Attach the pressure hoses to the machines inlet and outlet connecting branches. It is important to support the inlet and the outlet connecting branches in order to prevent deformation.

The pressure hoses must not hang down.

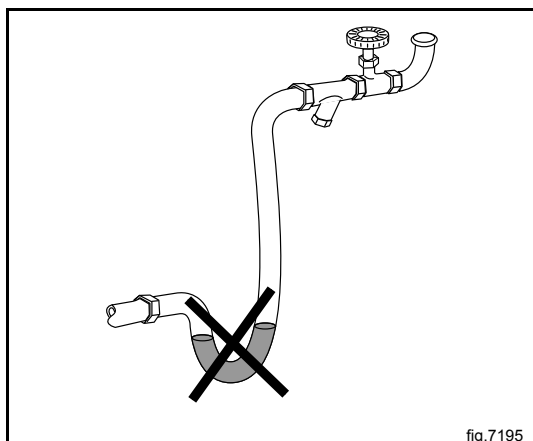

When ready

Leak test the system.

Clean the dirt collectors.

Perform a function check.


8 Gas connection

8.1 Fasten the label

Before installing the machine fasten the label “Read the user instructions” on the inside of the door in a suitable place and at the front panel.

The label must have the correct country code, choose the correct label from the gas kit.

Not applicable for Japan.

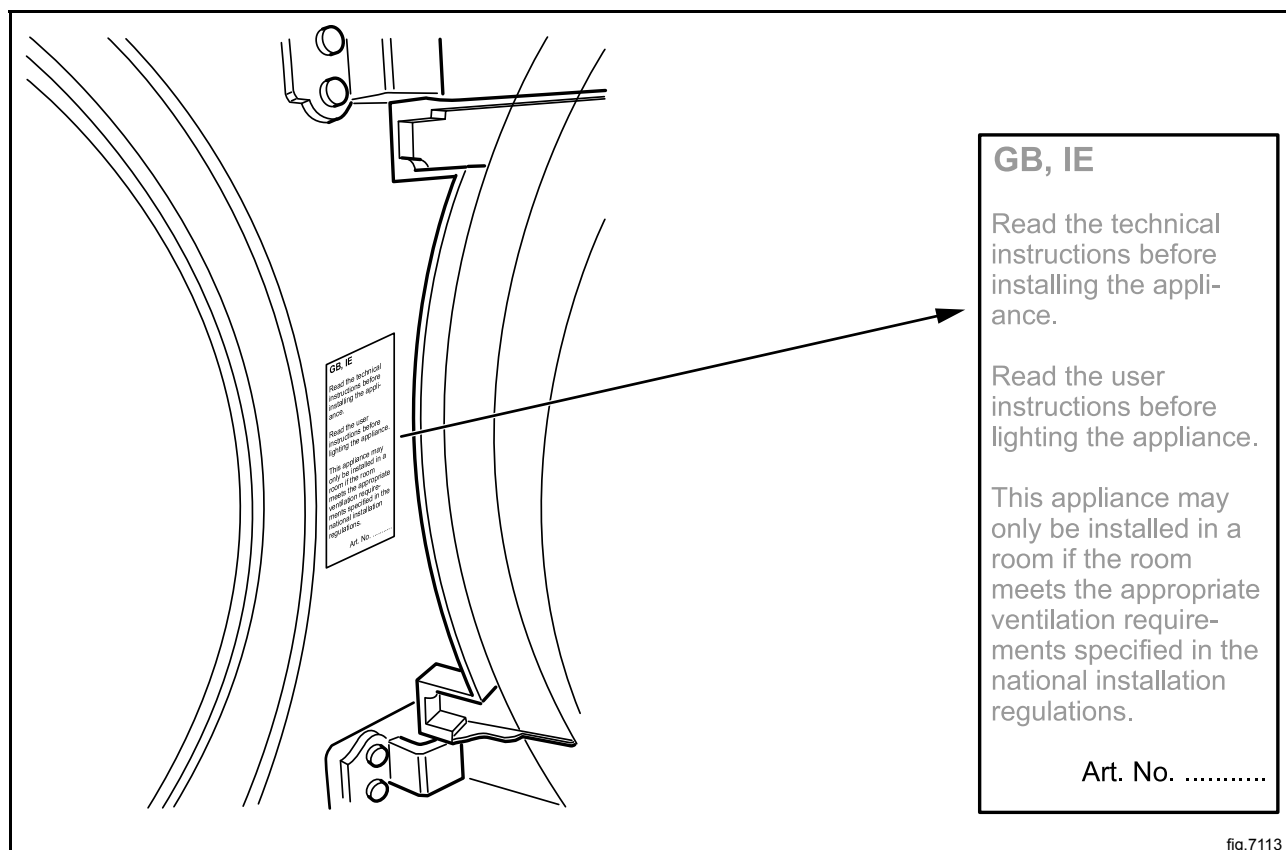

8.2 General



May only be carried out by qualified personnel.



Mount a shut-off valve upstream from the machine.

The factory nozzle pressure setting corresponds to the fuel value given on the data label.

Check that the nozzle pressure and fuel value correspond with the values in the gas tables on the following pages. If not, contact the supplier.

Bleed the pipe system before connecting the machine.

Note!

After connection all joints must be checked. There must not be any leaks.

8.3 Gas installation

This gas appliance is build to run on natural gas (group I2H and I2E), commonly identified by GNH.

Japan to run on LPG (group I3B/P).

The data label shows the injector size and the injector pressure and the countries that use this gas quality:

AL	Albania	IS	Iceland
AT	Austria	IT	Italy
BE	Belgium	JP	Japan
BG	Bulgaria	LT	Lithuania
CH	Switzerland	LU	Luxembourg
CY	Cyprus	LV	Latvia
CZ	Czech Republic	MK	Republic of Macedonia
DE	Germany	MT	Malta
DK	Denmark	NL	Netherlands
EE	Estonia	NEC	Non-european countries
ES	Spain	NO	Norway
FI	Finland	PL	Poland
FR	France	PT	Portugal
GB	United Kingdom	RO	Romania
GR	Greece	SE	Sweden
HR	Croatia	SI	Slovenia
HU	Hungary	SK	Slovakia
IE	Ireland	TR	Turkey

You should check the kind of energy gas that is available in your place.

There are many gas types of the same kind but the machine should be equipped with different kinds of nozzles depending on the gas type.

For non-european countries check the heat value of the energy gas and compare it to the declared heat value of gas in the attached label.

8.4 Table of pressure and adjustment

Liquied petroleum gases	Gas category	Inlet pressure (mbar)	Burner pressure (mbar)	Injector size (mm)	Air reducing plate (mm)	Label number	May be available in following countries
Butane	I3B/P	30, 37 or 50	28	2.3		490375644	BE, CY, DK, EE, FR, GB, HU, IT, LT, NL, NO, SE, SI, SK, RO, HR, TR, BG, IS, LU, MT, AT, CH, DE
Propane	I3P	30, 37 or 50	28	2.4		490375645	FI, NL, RO, BE, CH, CZ, IE, IT, ES, FR, GR, GB, HR, LT, NL, PT, SI, SK, AT, DE, LU
Propan and butane mixture	I3+	28-30 for butane and 37 for Propane	No regulation	2.3		490375643	BE, CH, CY, CZ, ES, FR, GB, GR, IE, IT, LT, LU, LV, PT, SK, SI

Natural gas	Gas category	Inlet pressure (mbar)	Burner pressure (mbar)	Injector size (mm)	Air reducing plate (mm)	Label number	May be available in following countries
	I2H, I2E	20	8	4.0		490375646	AT, BG, CZ, DK, EE, FI, GR, HR, HU, IS, IE, IT, LV, LT, NO, PT, RO, SK, SI, ES, SE, CH, TR, GB, DE, PL, LU
	I2L, I2LL	25, 20	12	4.0		490375642	NL, DE
	I2E+	20 or 25	No regulation	3.3		490375641	BE, FR

8.5 Test run

Loose the pressure measuring tap screw (2) 1/4 of a turn.

Connect a manometer to the measuring tap.


Select a program that uses heat.

Start the machine.

Check the nozzle pressure, see table.

If necessary adjust the regulator setting screw (4) behind the cover screw (3). Replace the cover screw (3) if removed.

Check that the gas is burning evenly.

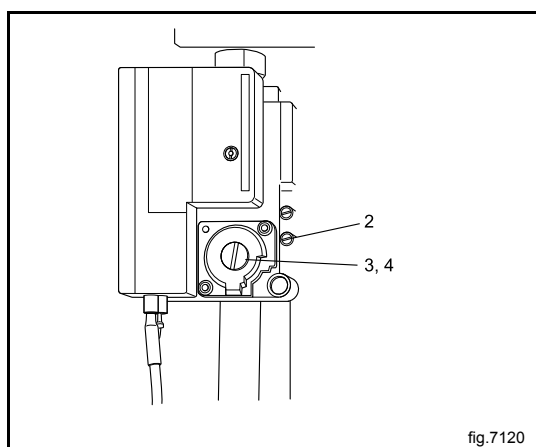

8.6 Converting instructions


Not applicable for Japan.

Disconnect the power to the machine.

Demount the lower back panel.

Remove the nozzle (1).

Mount the new supplied nozzle.

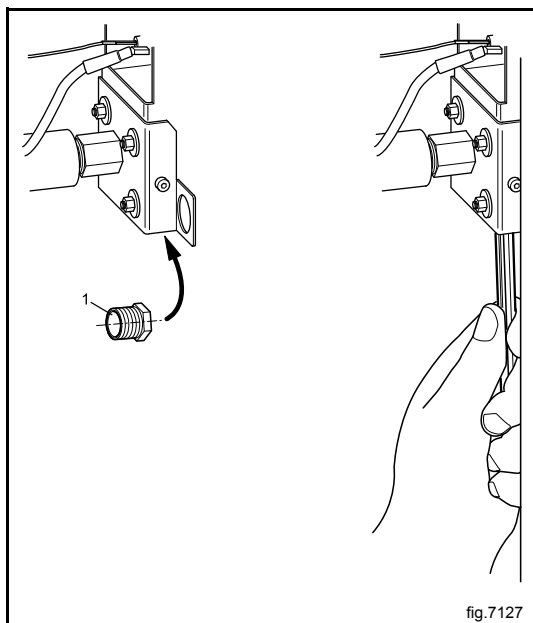


Loosen the measuring branch screw (2) 1/4 turn; connect a manometer to the measuring branch.

Connect the power to the machine and select a program with heat.

Start the machine.

Set the correct nozzle pressure according to the table on setting screw (4) under the cover screw (3).

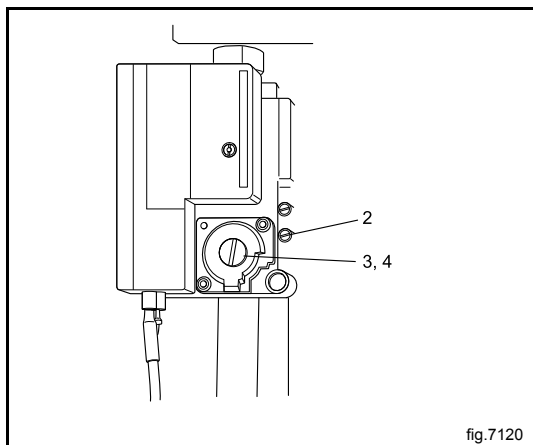

Check that the gas flame burns evenly.

Mount the cover screw (3).





Remount the lower back panel.

8.7 Data label

When the machine is to be converted to another gas type, the data label at the rear of the machine must be updated in order for the data to be correct.

Place the data label enclosed in the conversion kit on top of the data label as shown below. If there are more than one data label, select the label with the correct country code and gas type.

Not applicable for Japan.

<p>WXXXXX Product no.: 9868XXXXXX Serial no.: 09XXXX / 99XXXX OC: 09XXXXXX Date: 10XX Wiring diag: 432XXXXXXX Program: 432XXXXXX, 5XXX Type: WN3...WN3XXXX ELECTROLUX LAUNDRY SYSTEMS SWEDEN AB</p>	
	
<p>WXXXXX Product no.: 9868XXXXXX Serial no.: 09XXXX / 99XXXX OC number: 09XXXXXX Date(YYMM): 10XX Capacity: X kg Type/Model: WN3...WN3XXXX Voltage: 380 – 400V 3N ~ 50Hz Rated Input: 1,6kW</p>	<p>DK, NO, SE, FI, GB, ES, GR, IE, IT, PT, AT: 12H-20 MBAR DE: 12E(LL)-20MBAR ID.nr. 359BQ491 MANIF. PRESSURE : 10 MBAR. INJECTOR. Ø3,10 MM NATURAL GAS: G20-20 MBAR (INLET PRES: 20 MBAR, CAL. VAL. 37400 KJ/M3) Art. No.</p>
<p>DK, NO, SE, FI, CH, CZ, EE, LT, SI, TR, BG, RO : I2H GB, ES, GR, IE, IT, PT, AT, LV, HU, IS, SK : I2H DE, PL, LU : I2E(LL) PIN No 359BS703 MANIF. PRESSURE : 9 MBAR. INJECTOR: Ø2,58 MM NATURAL GAS: G20 (INLET PRES: 20 MBAR, CAL. VAL. 37400 KJ/M3) IP24D</p>	
<p>For safety reasons use only genuine spare parts.</p> <div style="display: flex; justify-content: space-between;">  <p>Made in Sweden Electrolux Laundry Systems AB 341 80 Ljungby, Sweden.</p> </div>	
<p>WXXXXX Product no.: 9868XXXXXX Serial no.: 09XXXX / 99XXXX OC: 09XXXXXX Date: 10XX Wiring diag: 432XXXXXXX Program: 432XXXXXX, 5XXX Type: WN3...WN3XXXX ELECTROLUX LAUNDRY SYSTEMS SWEDEN AB</p>	

9 Electrical connection

9.1 Electrical installation



The electrical installation may only be carried out by qualified personnel.



Machines with frequency-controlled motors can be incompatible with certain types of earth leakage circuit breaker. It is important to know that the machines are designed to provide a high level of personal safety, which is why items of external equipment such as earth leakage circuit breakers are not necessary. If you still want to connect your machine across an earth leakage circuit breaker, please remember the following:

- contact a skilled, authorised installation company to ensure that the appropriate type of breaker is chosen and that the dimensioning is correct
- for maximum reliability, connect only one machine per earth leakage circuit breaker
- it is important that the earth wire is properly connected, including to the earth leakage circuit breaker.

In instances where the machine is not equipped with an omni-polar switch, one must be installed beforehand.




Mount a multi-pole switch prior to the machine to facilitate installation and service operations.

The connecting cable should hang in a gentle curve.

Fuse size, see table.

9.2 Single-phase connection

Demount the cover plate from the supply unit. Connect the earth and other wires as shown.


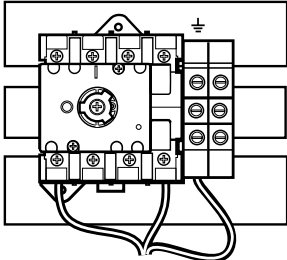
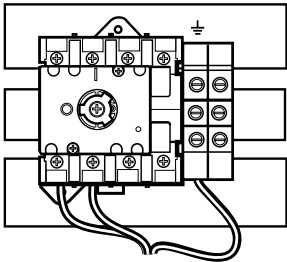
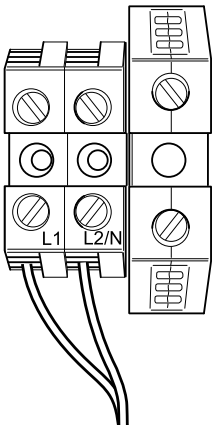
1NAC	
1AC	
1AC	

When the installation is completed remount the cover plate and check:

- that the drum is empty.
- that the machine operates by turning on the mains switch and start a program with heat.

9.3 Three-phase connection

Demount the cover plate from the supply unit. Connect the earth and other wires as shown.

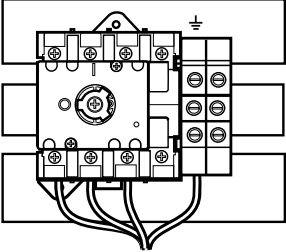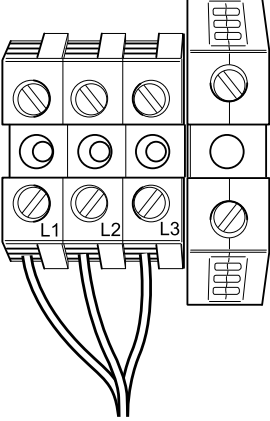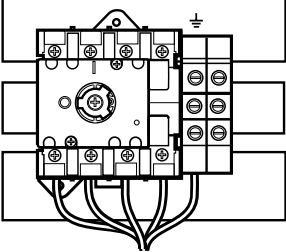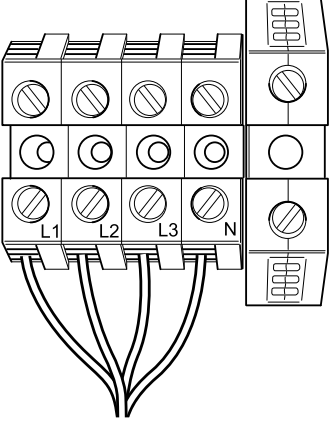3AC	
3AC	
3NAC	
3NAC	

When the installation is completed remount the cover plate and check:

- that the drum is empty.
- that the machine operates by turning on the mains switch and start a program with heat.

9.4 Electrical connections

Heating alternative	Main voltage	Hz	Heating power kW	Total power kW	Recommended fuse A
Electric heating	400–415V 3N ~	50/60	13.5	14.5	25
	400–415V 3N ~	50/60	18.0	18.9	35
	440–480V 3 ~	60	13.5	14.5	20
	440–480V 3 ~	60	18.0	19.0	35
	230–240V 3 ~	50/60	18.0	19.0	50
	230–240V 3 ~	50/60	13.5	14.5	50
	230–240V 1 ~	50/60	13.5	14.3	63
	230–240V 1 ~	50/60	18.0	18.8	100
	200V 3N ~	50/60	13.5	14.4	50
	200V 3N ~	50/60	18.0	18.8	63
Gas heating/Steam heating	400–415V 3N ~	50/60	-	1.0	10
	440–480V 3 ~	60	-	1.0	10
	230–240V 3 ~	50/60	-	1.0	10
	230–240V 1 ~	50/60	-	1.0	10
	200V 3N ~	50/60	-	0.9	10

9.5 Functions for I/O-cards

The electrical schematic can be one of the following:

9.5.1 Central payment (22J)

To start the machine from a central payment system, the payment system must transmit a start pulse to the machine. The start pulse can be either 230V or 24V. In order to receive a feedback signal once the machine has started, 230V or 24V must be connected to connection 19. The feedback signal on connection 18 remains active (high) during the entire program.

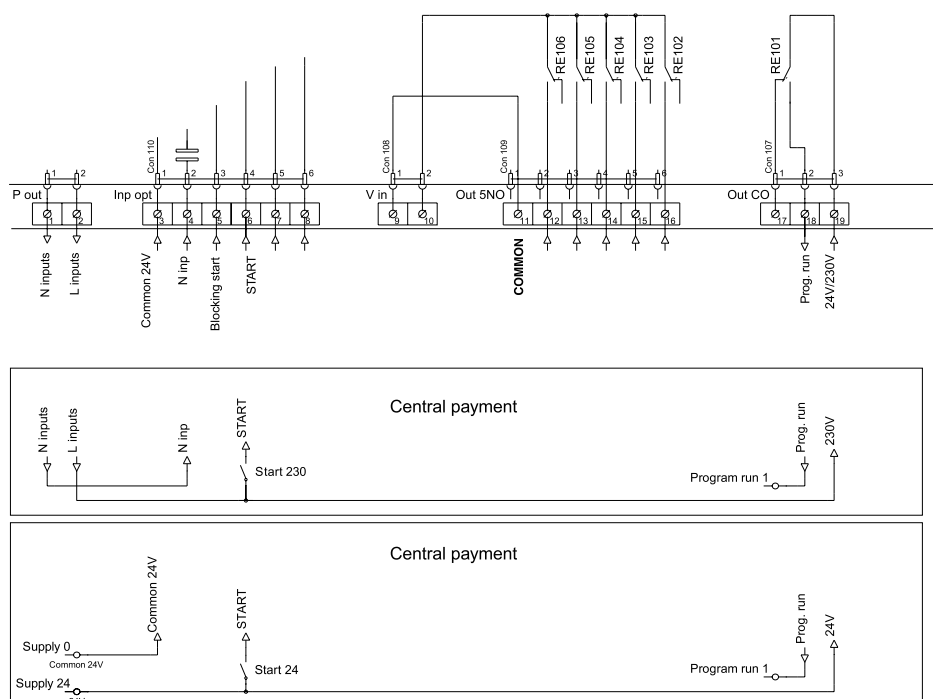


fig.7440

9.5.2 Central payment (22J)

The central payment or booking system shall transmit an active (high) signal to the machine once permission has been granted to start the machine. The signal must remain active (high) until the machine starts. The signal can be either 230V or 24V. In order to receive a feedback signal once the machine has started, 230V or 24V must be connected to connection 19. The feedback signal remains active (high) during the entire program.


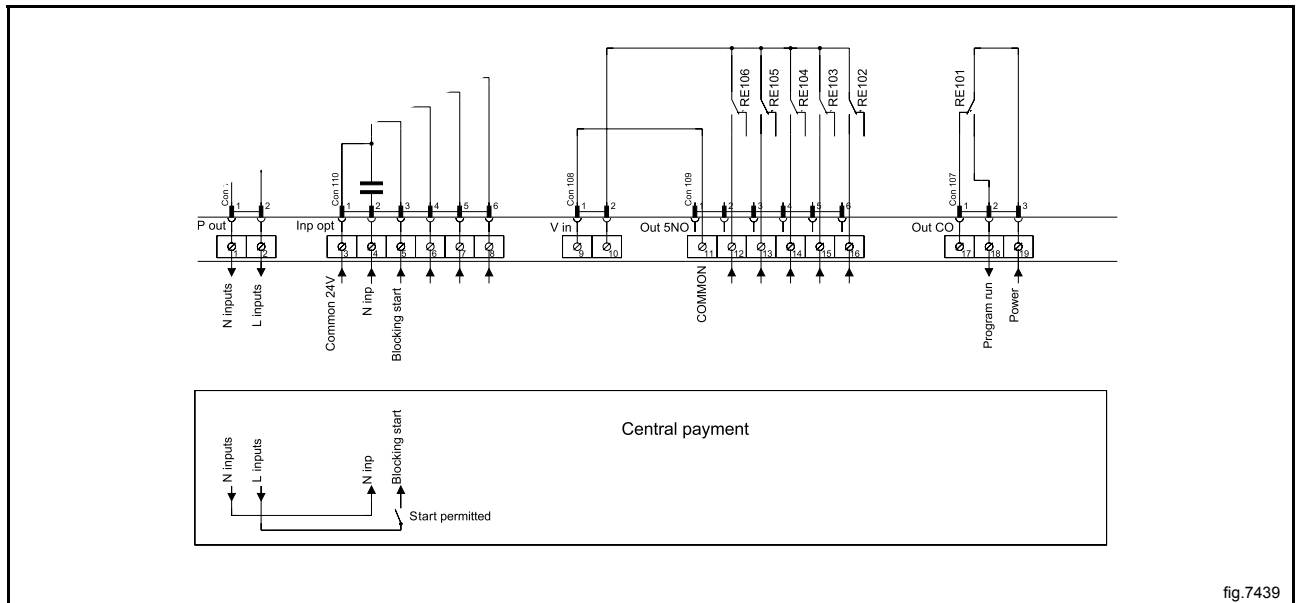


fig.7439

9.5.3 External coin meter/Central payment (22K)

The signal received from external coin meters must be a pulse.

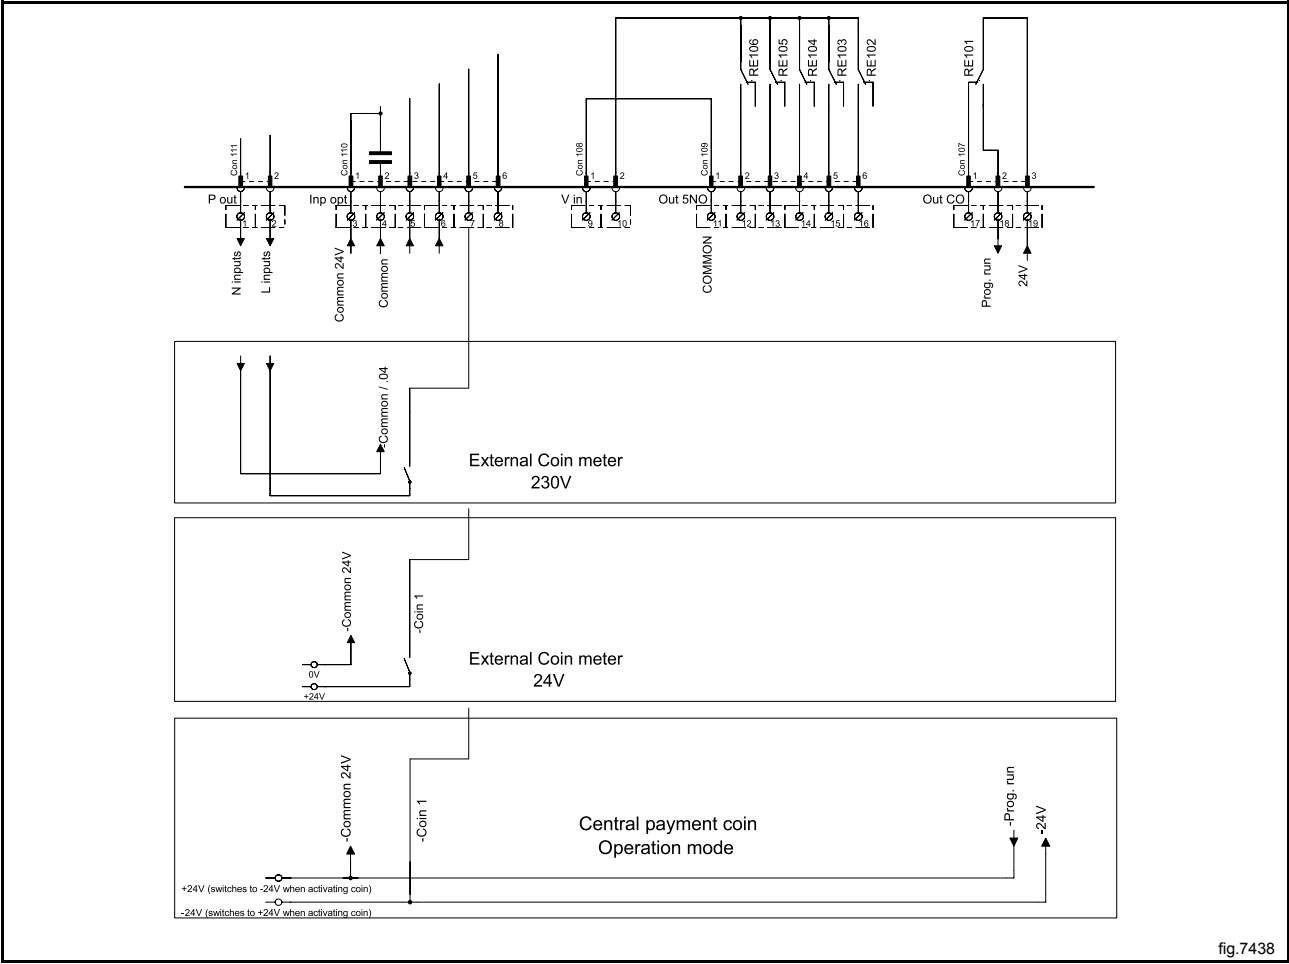

9.5.4 Price reduction (22K)

By maintaining an activated (high) signal on connection 5 ("Price red"), the price of the program can be reduced. This function has a number of uses, including providing reductions during a specific period of the day. Whilst the signal remains active (high), the price of the program is reduced by the percentage entered in the price programming menu.

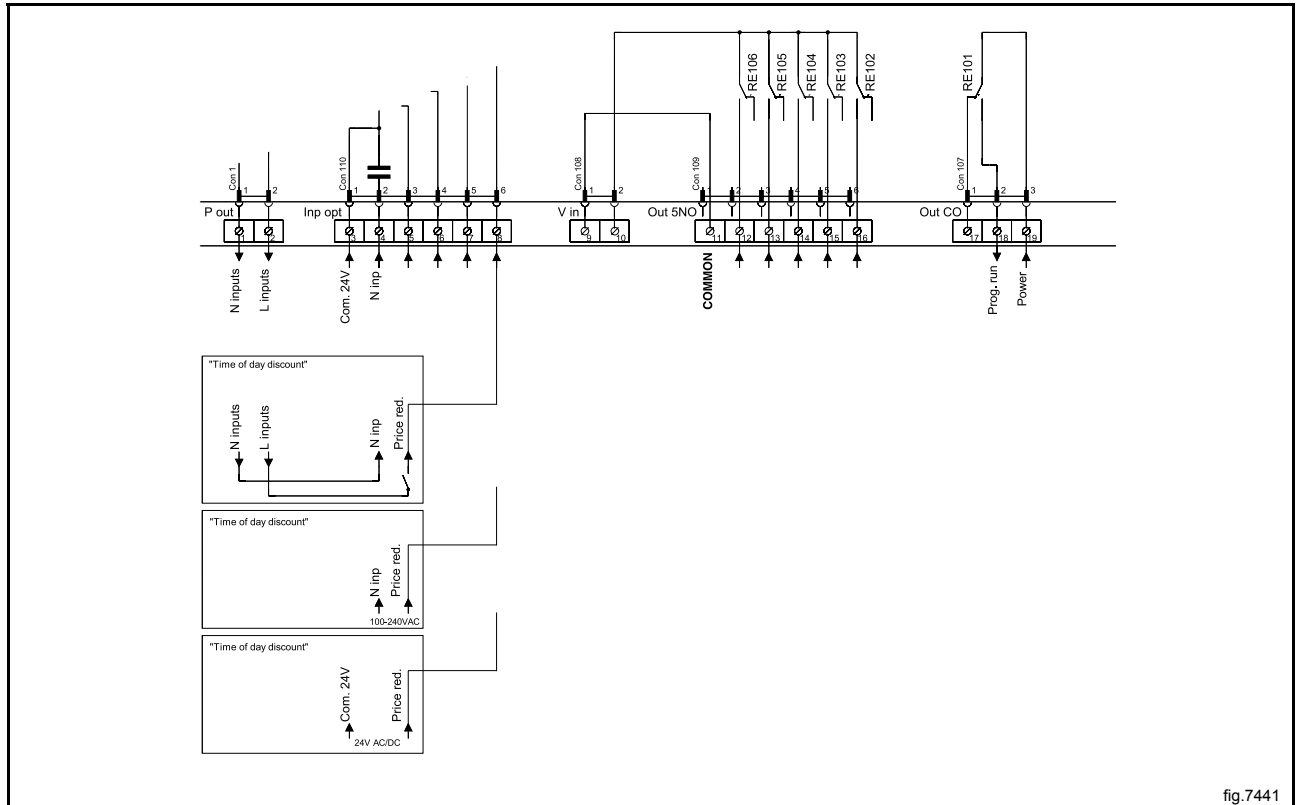


fig.7441

9.5 Option

9.5.1 External connection 100 mA

A special connection terminal is located on the connection console.

This connection can be used as external control of a fan.

The terminal for external control is equipped with 220–240V max.100 mA and is intended solely for the operation of a contactor

Max. connection 100 mA.

Gnd. must not be used for earthing of external board.

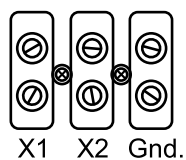


fig.7154

10 Function check



May only be carried out by qualified personnel.




A function check must be made when the installation is finished and before the machine can be used.

Check the automatic stop of the machine


- Start the machine.
- Check if the micro switches are working properly:
The machine must stop if the door is opened.

Check the direction of rotation (only on machines with 3-phase power supply)

- Demount the lower back panel of the machine.
- Check that the direction of the fan wheel is correct.

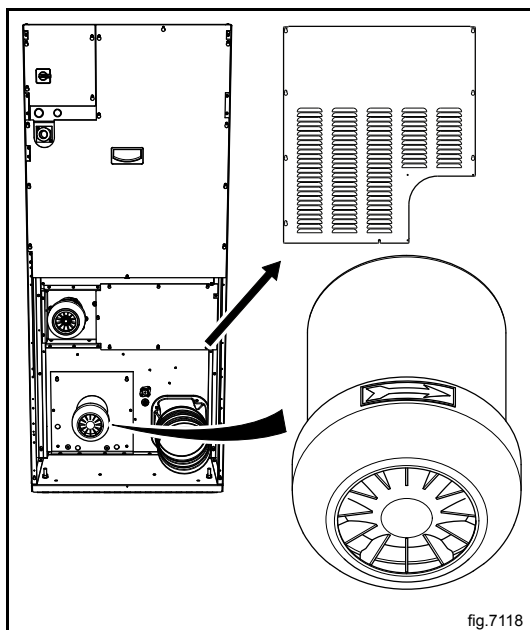

If the direction is wrong, swop two of the three phases to the left on the connection terminal.

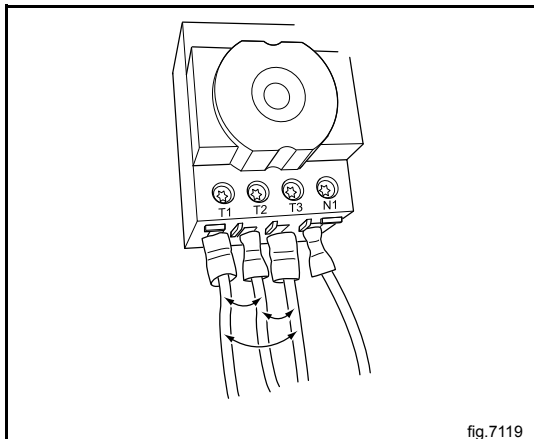

Check the heat

- Let the machine work for five minutes on a program with heat.
- Check that the heating is working by opening the door and feel if there is heat in the drum.

Ready to use

If all tests are OK the machine is now ready to be used.

If some of the tests failed, or deficiencies or errors are detected, please contact your local service organisation or dealer.

Washer extractors, Tumble dryers, Hydro extractors

Types:	W.55H., W3..., WN3..., W4.H., EXSM.X., H1..., N1130., N1190., N2..., N3..., N4..., N5...
Product standards:	EN 60335-2-4, -7, -11
EMF standards:	EN 50366:2003 + A1
EMC standards:	EN 61000-6-1 (2001) W.55H., W3..., W4.H., N1130, N1190, N2..., N3... EN 61000-6-3 (2001) W.55H., W3..., WN3..., W4.H., EXSM.X., N1130, N1190, N2..., N3... A11 (2003) WN3..., N5... EN 61000-3-11 (2001) EXSM.X. EN 61000-6-2 (2005) WN3..., N4..., N5... EN 61000-6-3 (2007) N4...

Försäkran om överensstämmelse

Vi, Electrolux Laundry Systems Sweden AB
SE-341 80 Ljungby, Sverige

försäkrar under eget ansvar att denna produkt, med typbeteckning och enl. ovan, är tillverkad i överensstämmelse med följande direktiv:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (gäller endast N'''''' och WN3...)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

CE Declaration of conformity

We, Electrolux Laundry Systems Sweden AB
SE-341 80 Ljungby, Sweden

declare under our sole responsibility that the product of the type stated above is manufactured in conformity with the following EU directives:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (N'''''' ... and WN3... only)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

EG-Konformitätserklärung

Wir, die, Electrolux Laundry Systems Sweden AB
SE-341 80 Ljungby, Schweden

erklären hiermit in alleiniger Verantwortung, daß das Produkt mit der oben genannten Typenbezeichnung mit folgenden EU-Richtlinien übereinstimmt:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (Nur N'''''' und WN3...)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

Déclaration de conformité CE

Nous, Electrolux Laundry Systems Sweden AB
SE-341 80 Ljungby, Suède

déclarons sous notre seule et unique responsabilité que le produit des type et numéro de série indiqués ci-dessus est fabriqué conformément aux directives UE suivantes:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (N'''''' et WN3... uniquement)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

Declaración de conformidad CE

Electrolux Laundry Systems Sweden AB
con sede en SE-341 80 Ljungby, Suecia

declara bajo su exclusiva responsabilidad que el producto cuyo tipo se especifica en el encabezado se ha fabricado conforme a las siguientes directivas:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (vale sólo N'''''' y WN3)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

Erklæring om EU-overensstemmelse

Vi, Electrolux Laundry Systems Sweden AB
SE-341 80 Ljungby, Sverige

erklærer på eget ansvar, at produktet med typebetegnelse som angivet er fremstillet i overensstemmelse med følgende EU-direktiver:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (gælder kun N'''''' og WN3...)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

EY-Vaatimustenmukaisuusvakuutus

Me, Electrolux Laundry Systems Sweden AB
SE-341 80 Ljungby, Ruotsi

vakuutamme yksinomaan omalla vastuullamme, että tuote, jonka tyyppitunnus lukee yllä, on valmistettu seuraavien [EU]-direktiivien mukaisesti:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (vain N'''''' ja WN3...)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

EF-samsvarserklæring

Vi, Electrolux Laundry Systems Sweden AB
SE-341 80 Ljungby, Sverige,

erklærer på eget ansvar at dette produktet, med typebetegnelse og produktionsnummer som angitt nedenfor, er produsert i samsvar med bestemmelsene i følgende direktiver:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (gjelder bare N'''''' og WN3...)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

EG-Conformiteitsverklaring

Wij, Electrolux Laundry Systems Sweden AB
SE-341 80 Ljungby, Zweden

verklaren hierbij op eigen verantwoordelijkheid dat het product van het type en met het serienummer zoals hieronder vermeld, is vervaardigd conform de volgende normen:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (alleen N'''''' en WN3...)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

Dichiarazione CE di conformità

Noi, Electrolux Laundry Systems Sweden AB
SE-341 80 Ljungby, Svezia

dichiariamo sotto la nostra esclusiva responsabilità che il prodotto del tipo specificato sopra è conforme alle seguenti direttive [UE]:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (solo N'''''' e WN3...)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

Declaração CE de conformidade

Nós, Electrolux Laundry Systems Sweden AB
SE-341 80 Ljungby, Suécia

declaramos sob nossa inteira responsabilidade que o produto com os números de série e de tipo abaixo indicados é fabricado em conformidade com as seguintes directivas [UE]:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (apenas N'''''' e WN3...)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

ΔΗΛΩΣΗ ΠΙΣΤΟΤΗΤΑΣ ΕΚ

H, Electrolux Laundry Systems Sweden AB
SE-341 80 Ljungby, Σουηδία

δηλώνει με αποκλειστική της ευθύνη ότι το προϊόν του ανωτέρω αναφερόμενου τύπου κατασκευάζεται σύμφωνα με τις ακόλουθες οδηγίες της Ευρωπαϊκής Ένωσης:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (N'''''' και WN3... μόνο)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

CE megfelelőségi nyilatkozat

Mi, az, Electrolux Laundry Systems Sweden AB
SE-341 8 Ljungby, Svédország

felelőségünk teljes tudatában kijelentjük, hogy az alább megadott típusú termék gyártása a következő EU-irányelvekkel összhangban történik:

- LVD Directive 2006/95/EC
- EMC Directive 2004/108/EC
- GAS Directive 2009/142/EC (csak az N'''''' és WN3... esetén)
- CE Marking Directive 93/68/EEC
- RoHS Directive 2002/95/EC
- WEEE Directive 2002/96/EC
- MD Directive 2006/42/EC

Ljungby 2011.06.21




Franco Panno
Vice President Technical Operations

Translation table for model name to type of approval

Commercial name	Type
W455H	W.55H.
W465H	W3...
W475H	W3...
W4105H	W3...
W4130H	W3...
W4180H	W3...
W4240H	W3...
W4300H	W3...
FOM71 CLS	W3...
WB4130H	W3...
WB4180H	W3...
PW9	W3...
W475S	W3...
W485S	W3...
W4105S	W3...
W4130S	W3...
W4180S	W3...
W4250S	W3...
W4330S	W3...
W475N	W3...
W485N	W3...
W4105N	W3...
W4130N	W3...
W4180N	W3...
W4250N	W3...
W4330N	W3...
WD4130H	WN3...
WD4240H	WN3...
W4400H	W4.H.
W4600H	W4.H.
W4850H	W4.H.
W41100H	W4.H.
W4280X	EXSM.X.
W4350X	EXSM.X.
W4600X	EXSM.X.
C240	H1...
C260	H1...
C240R	H1...
C260R	H1...
C290R	H1...
T4130	N1130..
T4190	N1190..
PD9	N1190..
T4250	N2...
T4350	N2...
T5290	N2...
T5550	N2...
T5675	N2...

Commercial name	Type
T4300S	N3...
T4290	N4...
T4530	N4...
T4650	N4...
T4900	N4...
T41200	N4...
T4900CR	N4...
T41200CR	N4...
T4300LE	N5...

Ljungby 2011.06.21


Franco Panno

Vice President Technical Operations



Skrotning av maskin

När maskinen inte längre skall användas måste den lämnas till en återvinningsstation för destruktion. Många detaljer i maskinen går att återanvända, men den innehåller även annat material som måste tas om hand på ett korrekt sätt. Lämna därför aldrig maskinen eller delar av maskinen i hushållsavfallet, eftersom det kan leda till hälsorisker eller skador på miljön.

Scrapping of machine

When the machine is no longer to be used, it must be submitted to a recycling facility for destruction. The majority of the components in the machine can be reused, but it also contains other material that must be taken care of in the correct way. Therefore, never mix the machine or its parts with domestic waste as this may lead to health hazards or damage to the environment.

Entsorgung des Geräts

Wenn das Gerät nicht länger im Gebrauch ist, muss dieses einer Recyclingstation zur Entsorgung zugeführt werden. Viele Komponenten des Geräts sind recyclingfähig, enthalten aber auch Materialien, die vorschriftsmäßig entsorgt werden müssen. Entsorgen Sie daher das Gerät oder Geräteteile niemals im Hausmüll, da dies Gefahren für die Gesundheit oder Umweltschäden nach sich ziehen kann.

Mise au rebut de machine

Lorsque la machine n'est plus utilisée, elle doit être déposée à une installation de recyclage pour y être détruite. La majorité des composants de la machine peuvent être réutilisés mais celle-ci contient également d'autres matériaux qui doivent être traités correctement. C'est pourquoi vous ne devez jamais mélanger la machine ou ses pièces avec les ordures ménagères, risque de pollution pour l'environnement ou la santé.

Desguace de la máquina

Cuando la máquina no tenga que utilizarse más, ha de entregarse a una instalación de destrucción para su reciclado. La mayor parte de sus componentes pueden volver a utilizarse, pero consta también de otros materiales que han de ser tratados de la manera correcta. Por esa razón nunca mezclar la máquina ni sus partes con la basura doméstica pues esto podría constituir un peligro para la salud o dañar el medio ambiente.

Bortskaffelse af maskinen

Når maskinen ikke længere er i brug, skal den afleveres til destruktion på en genbrugsstation. Mange dele i maskinen kan genanvendes, men den indeholder også andre materialer, der skal håndteres korrekt. Smid derfor ikke maskinen eller dele af den ud sammen med husholdningens almindelige affald, da det kan være forbundet med sundhedsrisiko eller give miljøskader.

Koneen hävittäminen

Kun koneita ei enää käytetä, se pitää luovuttaa kierrätyskeskukseen tuhottavaksi. Suurinta osaa koneen osista voidaan käyttää uudelleen, mutta se sisältää myös materiaaleja, jotka pitää käsitellä asianmukaisesti. Älä sen vuoksi koskaan laita koneita tai sen osia kotitalousjätteen sekaan, sillä se saattaa aiheuttaa terveysriskejä tai vahinkoa ympäristölle.

Skroting av maskin

Når maskinen ikke lenger skal brukes, må den leveres til en gjenvinningsstasjon for destruksjon. Det går an å gjenbruke mange deler av maskinen, men den inneholder også annet materiale som man må ta hånd om på riktig måte. Legg derfor aldri maskinen eller deler av maskinen i husholdningsavfallet, siden det kan føre til helse- eller miljøskader.

Afdanken van de machine

Als de machine niet langer gebruikt gaat worden, moet deze ter vernietiging worden aangeboden bij een recyclinginrichting. De meeste componenten van de machine kunnen worden hergebruikt, maar hij bevat ook ander materiaal dat op een juiste wijze moet worden behandeld. Daarom de machine of zijn onderdelen nooit bij het huisvuil zetten, want dat kan leiden tot gezondheidsrisico's of schade aan het milieu.

Rottamazione della macchina

Quando la macchina non può più essere utilizzata, deve essere affidata a un centro di riciclaggio che ne effettui la rottamazione. La maggior parte dei componenti della macchina sono riciclabili, ma ce ne sono anche alcuni che devono essere smaltiti in modo appropriato. Perciò, non mischiare mai la macchina o parti di essa con i normali rifiuti domestici, poiché ciò potrebbe comportare rischi per la salute o per l'ambiente.

Złomowanie maszyny

Wycofaną z użytkowania maszynę należy przekazać do zakładu utylizacji w celu złomowania. Większość podzespołów maszyny nadaje się do powtórnego wykorzystania, lecz zawiera ona także inne materiały, z którymi należy postępować w odpowiedni sposób. Z tego powodu niedozwolone jest łączenie maszyny lub jej części z odpadami domowymi, gdyż może to prowadzić do zagrożenia zdrowia lub szkody dla środowiska.

Vyřazení přístroje

Přístroj, který již nebude používán, by měl být odevzdán k likvidaci do ekodvora. Většina součástí přístroje může být opětovně použita, některé ale vyžadují likvidaci přesně daným způsobem. A proto nikdy nemíchejte dohromady přístroje nebo jejich části s domácím odpadem, mohlo by to vést ke zdravotním rizikům nebo k poškození životního prostředí.

Οριστική απόσυρση μηχανήματος

Όταν το μηχάνημα δεν προορίζεται για περαιτέρω χρήση, θα πρέπει να οδηγείται σε εγκατάσταση ανακύκλωσης για καταστροφή. Το μεγαλύτερο ποσοστό των εξαρτημάτων του μηχανήματος μπορεί να χρησιμοποιηθεί ξανά, αλλά το μηχάνημα περιλαμβάνει και άλλα υλικά η διαλογή των οποίων θα πρέπει να πραγματοποιείται με τον κατάλληλο τρόπο. Κατά συνέπεια, μην αναμιγνύετε ποτέ το μηχάνημα ή τα εξαρτήματά του με οικιακά απορρίμματα καθώς αυτό μπορεί να αποβεί επικίνδυνο για την υγεία ή επιβλαβές για το περιβάλλον.



Thinking of you
Electrolux

Electrolux Laundry Systems Sweden AB
341 80 Ljungby, Sweden
www.electrolux.com/laundrysystems

Share more of our thinking at www.electrolux.com